


H 2



Note
 (19) = Start Box
 Slot Numbers

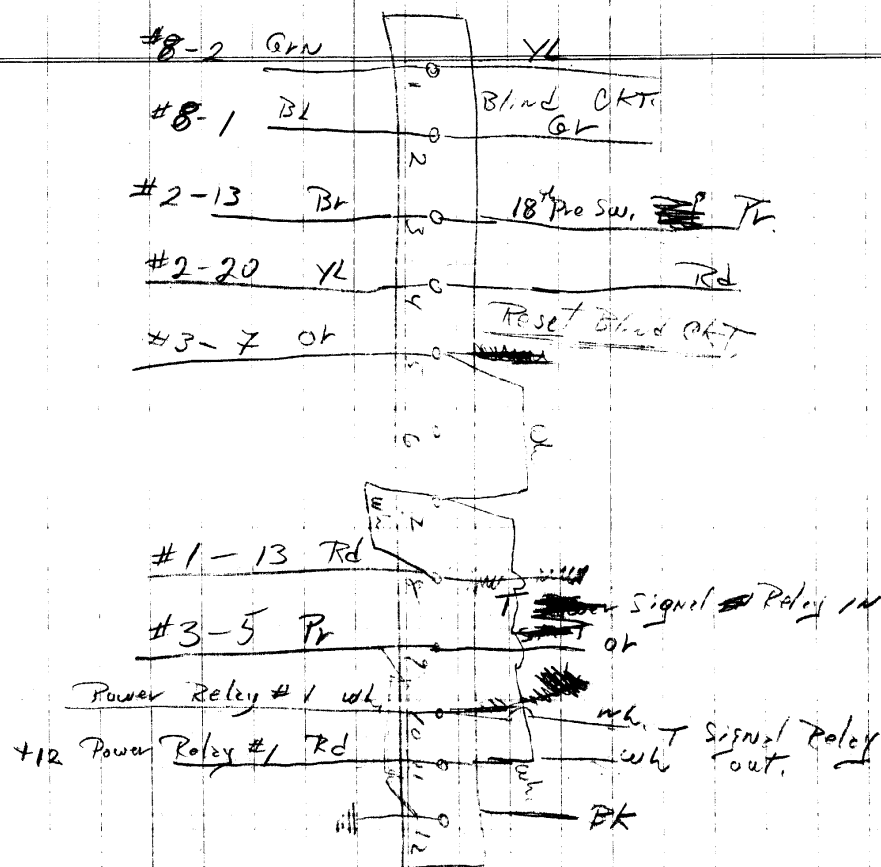

Control / Term Strip # 7

To 52 Pin Connector

Term Strip # 6

Term #
Pin 52
Pin Connector

SW #	Color	Pin	Color	Pin
SW # 1	GR	1	GR	17
SW # 1	Rd	2	wh	20
SW # 1	BL	3	BL	23
SW # 2	wh	4	OR	7
SW # 2	YL	5	Br	24
SW # 2	OR	6	YL	23
SW # 3	Br	7	BL	A
SW # 3	Bk	8	OR	C
SW # 3	GRY	9	Br	21
SW # 4	YL	10	wh	+
SW # 4	Bk	11	Br	-
SW # 4	Rd	12	YL	


All switches are Top Row Auto Man. Reset.

OK

unclassified

Selector Mag Driver.

Gr YL - Sig Line IN.
 or Br. out to Sel Mag.
 BL Gr. Blnd Ckt

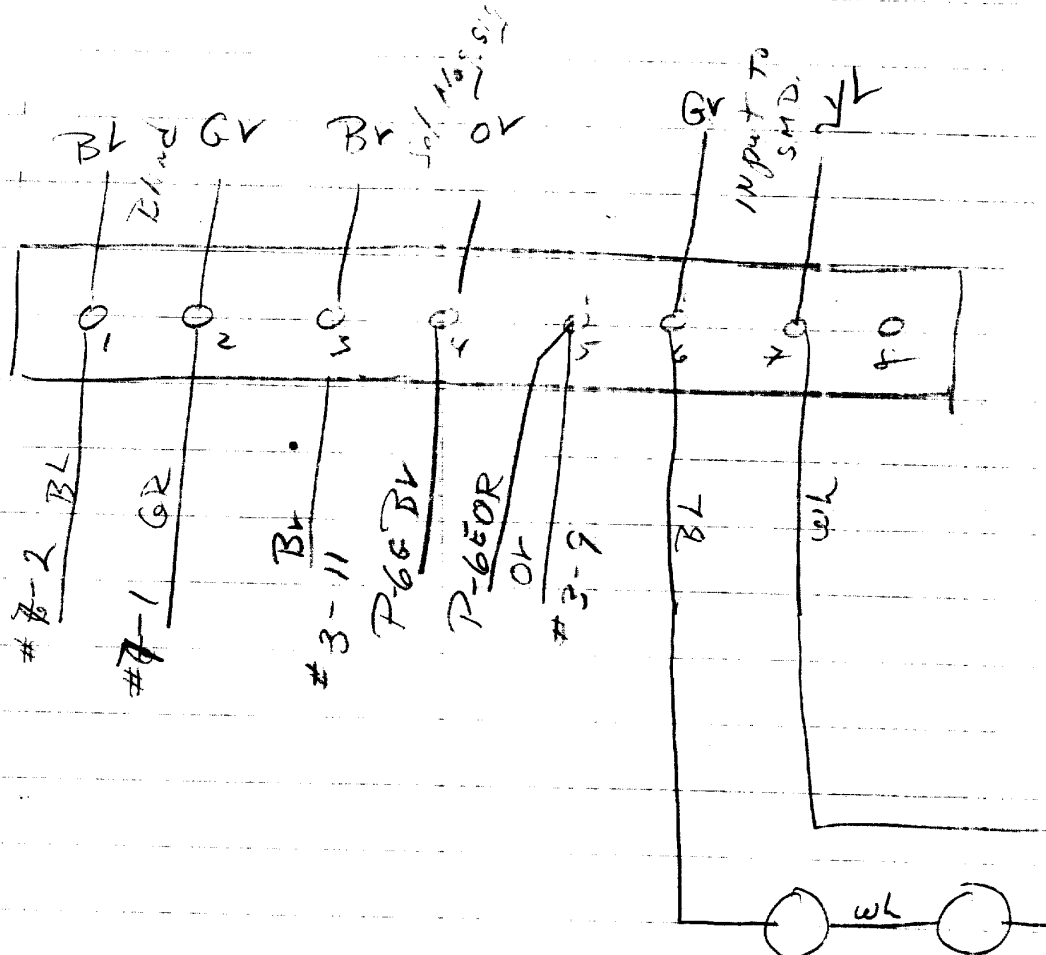

Self Closing Jacks
 Convrt Input Test
 Input TO Input

Note

#3 - 9 Term Strip
 Term Num Loc.

1. Stunt Box Slot No 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31


2. Contact. NC NC NC NC NC NC NC NC NC NC NO NO NO NO NO NO NO NO NO NO NO NO NO NO NO NO NO NO

3. Character. 1 2 3 4 5 6 7 8 9 0 I N T F / ANY BRS

1. Stunt Box Slot No 32 33 34 35 36 37 38 39 40 41 42

2. Contact. NO NO NO NO NO NO NO NO NC

3. Character. ALL ANY BRS

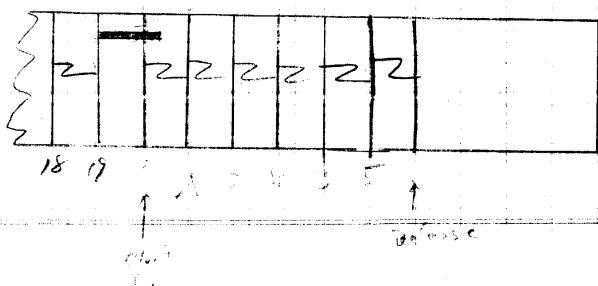

Note


2 = Sequential Count.

— = in slot #33 is 2
153604 Powl Hot
operates 2 F/L.

H-2 Stunt Box
2-1- out

200C

Pr. BK GR YL

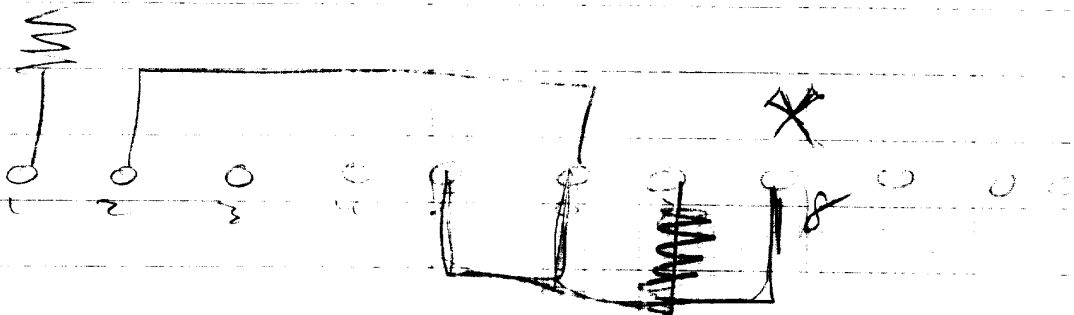

MS

16S-1S AMP. M-8-


28-16S → 5-

Fiber feed throughs

1 Stand ^{Bar} 32 33 34 35 36 37 38 39 40 41 42
52 of 100

2 Contact NO NO NO NO NO NO NO NO NO

3 Character All ANY Bars 4

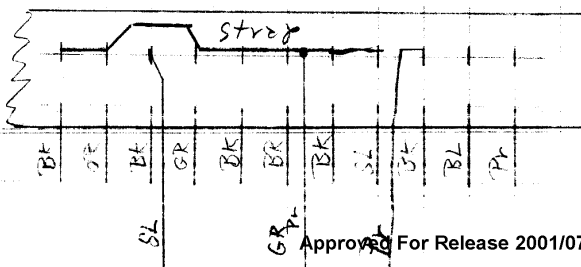

The cable between
the control box & the
PTR plugs contains
wires
- Pr.

H-2 Stent Box
Contact Box L2y
out & wiring.

200

New) TIME
1 2 3 4 V V V V V

old date Time
NA 12/1234 V



TRWC

Clock Change

H-2

VA 12/1234 ↓

File

Time

All LTRS follow
for 5 Characters

5	<u>STP</u>	<u>STP</u>	<u>Pr</u>	<u>Br/wh</u>	<u>wh/Rd</u>
4	<u>STP</u>	<u>Blank</u>	<u>SL</u>	<u>Rd</u>	<u>wh/BL</u>
3	<u>Blank</u>	<u>Br</u>	<u>YL</u>	<u>wh</u>	<u>or/wh</u>
2	<u>STP</u>	<u>BK STP</u>	<u>BL</u>	<u>Bk/wh</u>	<u>Gry/wh</u>
1	<u>Gr/y1 STP</u>	<u>or</u>	<u>wh/y</u>	<u>Gr</u>	<u>Gr/wh</u>
	<u>1.</u>	<u>2.</u>	<u>3.</u>	<u>4.</u>	<u>5.</u>

Position

old Read out VA 12/1234 V
Date Time
New Read out A 1234 V
Time

STP = Straps

ZWC

H-2.

Stunt Box
Parts List.

Page 1 of 3

Slot No.	Character.	4703 Spring	90517 Spring	157240 Spring	152653 Spring	153604 Piece	152660 Piece	154613 Piece	152121 Piece	152642 FL.
1	1	0	0	0	0	0	0	0	0	0
2	2	0	0	0	0	0	0	0	0	0
3	3	0	0	0	0	0	0	0	0	0
4	4	0	0	0	0	0	0	0	0	0
5	5	0	0	0	0	0	0	0	0	0
6	6	0	0	0	0	0	0	0	0	0
7	7	0	0	0	0	0	0	0	0	0
8	8	0	0	0	0	0	0	0	0	0
9	9	0	0	0	0	0	0	0	0	0
10	Ø	0	0	0	0	0	0	0	0	0
11	I	0	0	0	0	0	0	0	0	0
12	N	0	0	0	0	0	0	0	0	0
13	T	0	0	0	0	0	0	0	0	0
14	Fis	0	0	0	0	0	0	0	0	0
15	ANY	0	0	0	0	0	0	0	0	0
16	ANY	0	0	0	0	0	0	0	0	0
17	ANY	0	0	0	0	0	0	0	0	0
18	ANY	0	0	0	0	0	0	0	0	0
19	ANY	0	0	0	0	0	0	0	0	0
20	ANY	0	0	0	0	0	0	0	0	0
21	ANY	0	0	0	0	0	0	0	0	0
22	ANY	0	0	0	0	0	0	0	0	0
23	ANY	0	0	0	0	0	0	0	0	0
24	ANY	0	0	0	0	0	0	0	0	0
25	ANY	0	0	0	0	0	0	0	0	0
26	ANY	0	0	0	0	0	0	0	0	0
27	ANY	0	0	0	0	0	0	0	0	0
28	ANY	0	0	0	0	0	0	0	0	0
29	ANY	0	0	0	0	0	0	0	0	0
30	ANY	0	0	0	0	0	0	0	0	0
31	ANY	0	0	0	0	0	0	0	0	0

OK

RWC

#-2

Stunt Box
Parts ListPage 2 of 3

Slot #	Character	4703 Spring	90517 Spring	157240 Spring	152653 Spring	153604 Pawl	152660 Pawl	154613 Pawl	152121 Pawl	152642 FL.
32	ANY	•	•	•	•					
33	ANY	•	•	•	•	•	•		•	
34	ANY	•	•	•			•	•		
35	ANY	•	•	•	•		•	•		
36	ANY	•	•	•	•		•	•		
37	ANY	•	•	•	•		•	•		
38	ANY	•	•	•	•		•	•		
39	ANY	•	•	•	•		•	•		
40	ANY	•	•	•	•		•	•		
41										
42										

Note

1. All Function Bars are made from the 153440 universal function Bar.
2. Slot # 33 uses the 153604 Pawl which operates 2 function Levers.
3. Slot # 34 does not require a Pawl due to Note 2.
4. Characters shown as ANY will operate on "Any" character that is received.

RWC

H-2

Stunt Box
Parts List

Page 3 of 3

	QTY
110743 Lock Washer	21
125011 Flat Washer	21
151689 Screw	21
172591 Spring Contact	42
172595 Plate	10
172597 Block Contact	10
157889 Arm Contact NC	11
157887 Arm Contact NO	25
172599 Block Contact	1
172619 Plate	1

Additional Parts that were added
to the LS - unit.

	QTY
157262 - Bracket	1
157273 - Connector Plug 35 PT.	1
152467 - Connector Plug 20 PT	1
151658 - Screw	2
2121 - Lock Washer	2
152465 - Connector Receptacle 20 PT.	1
157399 Connector Receptacle 35 PT.	1
155614 Cover	1
155766 Clamp Cable	2
155723 Screw	2
157992 Bracket	2
157993 Bracket	2


TWC

H-2

Block on
Top of Block

4

ARC 1 Clock AN 5 BK GR	10	AD 5 G Distributor Contacts #5 LD
ARC 2 Clock AN 4 BK Y	20	AD 4 Y " " #4 LD
ARC 3 Clock AN 3 BK O	30	AD 3 W " " #3 LD
ARC 4 Clock AN 2 BK R	40	AD 2 R " " #2 LD
ARC 5 Clock AN 1 BK Bv	50	AD 1 WR " " #1 LD
ARC 6 Clock AN 12 BWR	60	AD 12 BR Clutch Mag LD
AB 18 - 48V BK	70	AD 13 W Clutch Mag LD
SS Relay Clock BN 1 or Bv	80	AD 8 - 0 Aux Contact LD
OR #3-11 TO Signal Line CKT	90	AD 10 S Sig Line Conv LD
BK #3-10 TO Signal Line CKT	100	AD 6 P Sig Line S/stop
Signal Line Clock AN 11 Y GR Not used	110	AD 9 BK Not used LD
AB 20 + 48V	120	AD 7 BL Aux Contact LD
	130	BN 3 whp Blocking Mag Clutch
	140	BN 2 BL SL FR Relay Clock

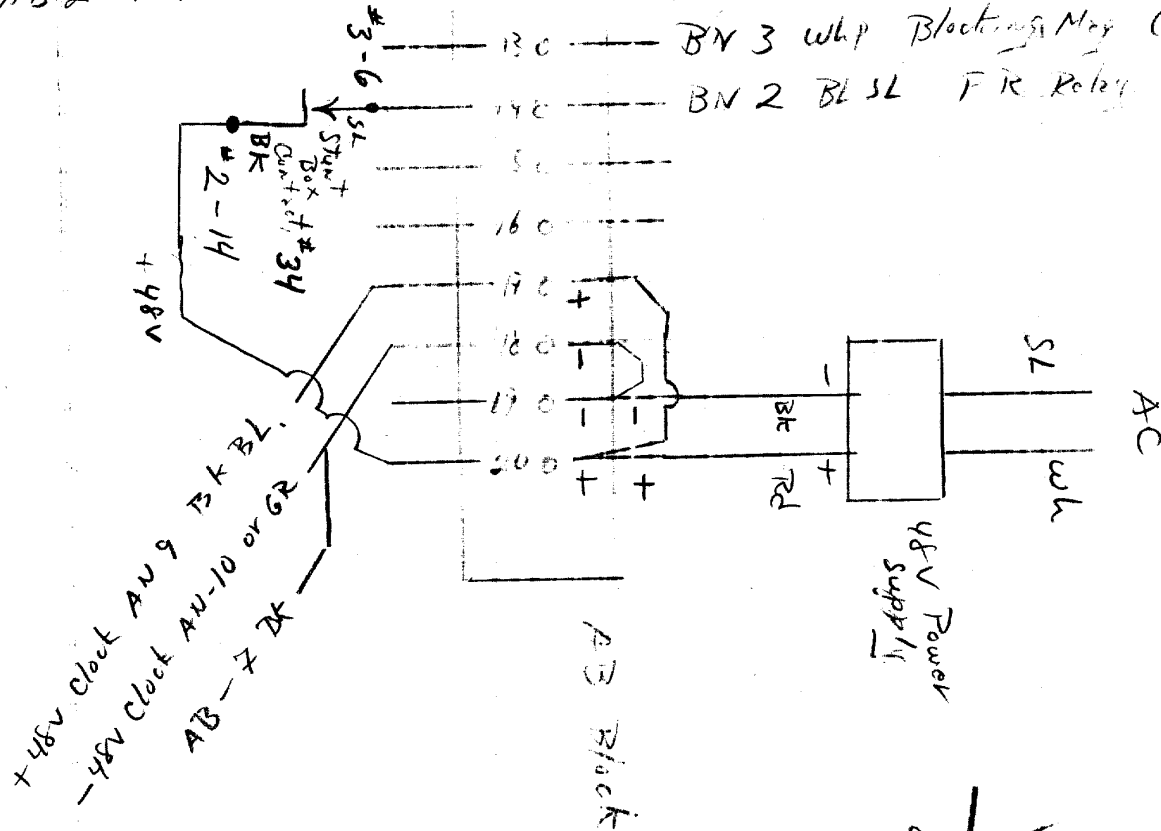

TTY No 312617 Cable

OK



Note # Term Strip
Term Number.

ZWC

Bottom View of LS Printer Plugs (R)

Note

The cable between these plugs and the Stunt box contains spare wires 3 - Pr.

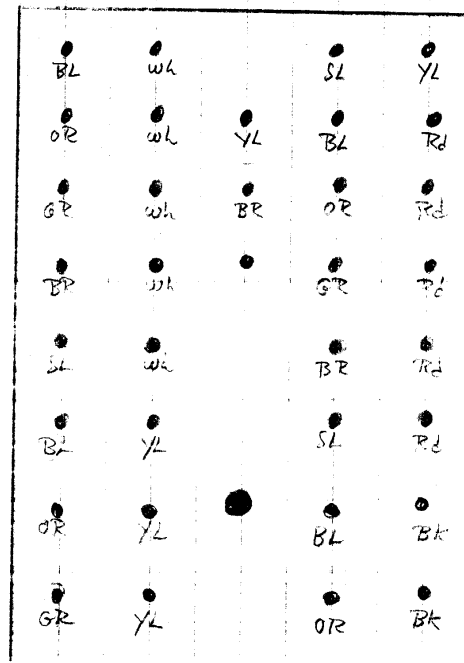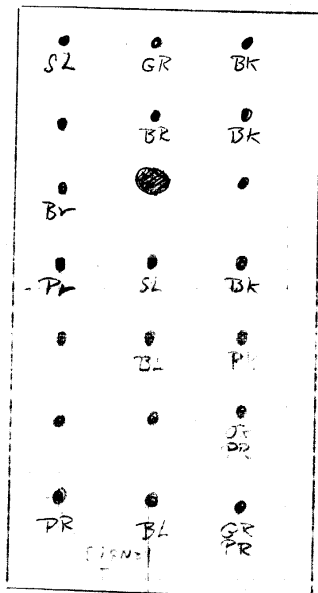

REC

H #2

Printer Plug Layout Bottom View

View of Back (Female)
MTD on console (Light)



[Handwritten signature]


~~View of Back~~

Back view of 52 ft
(F) - 1st

[Handwritten signature]

View of Back, (Male)

MS 3106 A - 36 - 403

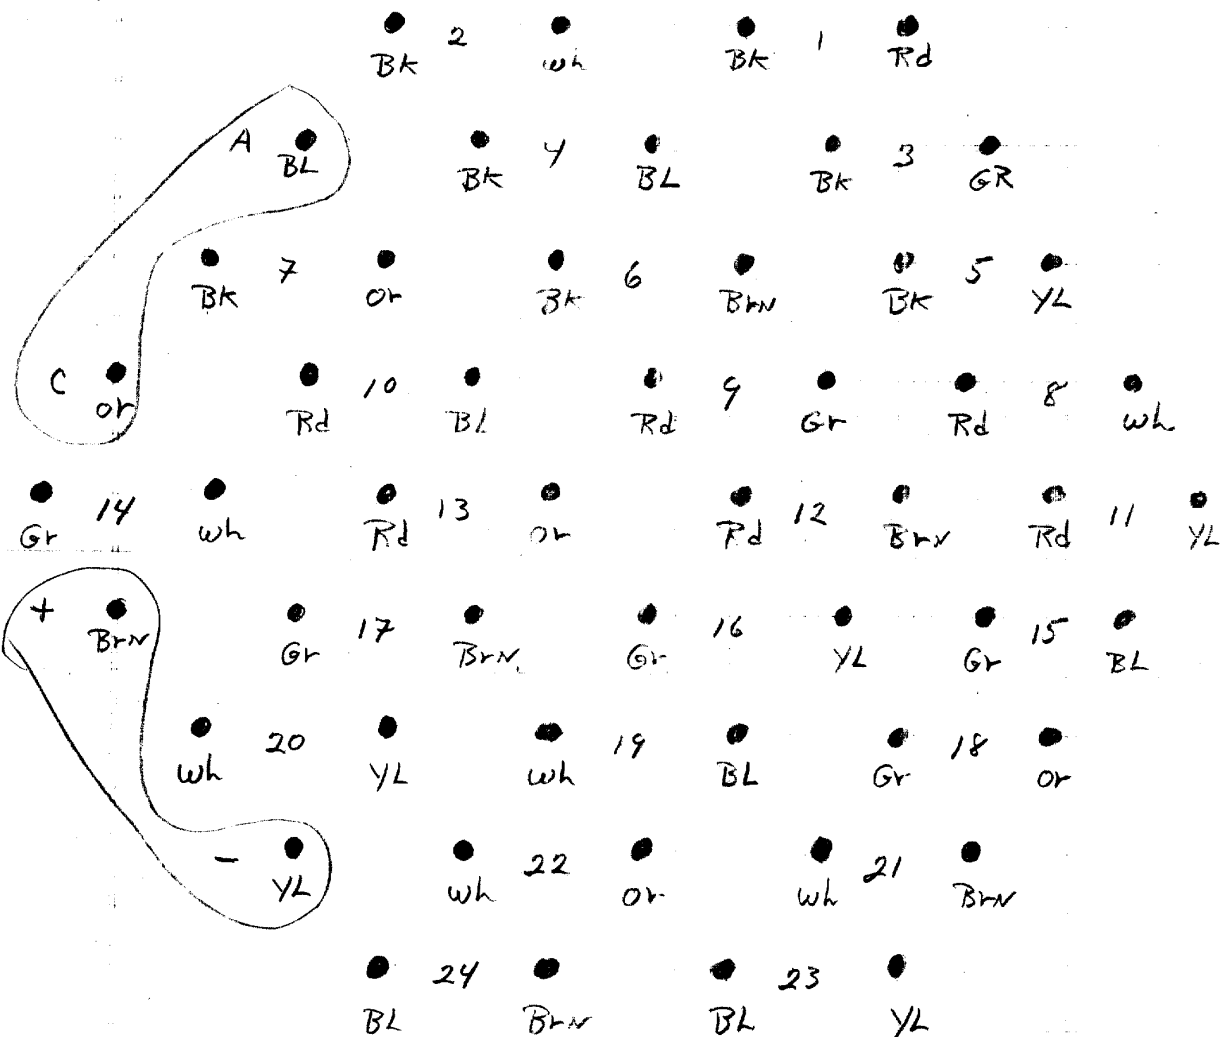

RWC

Term Strips Top of Rack

Approved For Release 2001/07/16 : CIA-RDP78S05452A000100040008-5

H-2

Cable To PTR Plugs.

#1

#1

#3

11V
BL
42
Pr
OR
Gr/Pr, Comm.
Wh
YL
Br. T. Power start.

#6-9 Pr

To #4-14 BL

#6-5 or Br. Reset Blind

BL
Pr.

SMD OR
Clock Br 10
SMD Br
clock or 9

BL
Pr. } SigLine.

Br #6-3

wh #4-20

#6-4 YL

YL
Rd
Br
Rd
OR
Rd
Wh
Gr
BL
Gr
YL
Gr
Br
OR
BK
OR
Gr
BL
Wh
YL
BK
OR
Gr
BL
Wh
YL
BK

Rd
BK
Wh
BK
Gr
BK
BL
BK
YL
BK
Br
BK
YL
Wh
Rd
Gr
Rd
BL
Rd

To 54 Pin Connector on Side of Rack.

#3-6

Approved For Release 2001/07/16 : CIA-RDP78S05452A000100040008-5


Blind Generated from Pre Sw.

Note

View of
MTD on console (light)



MS 3106 A - 36 - 403

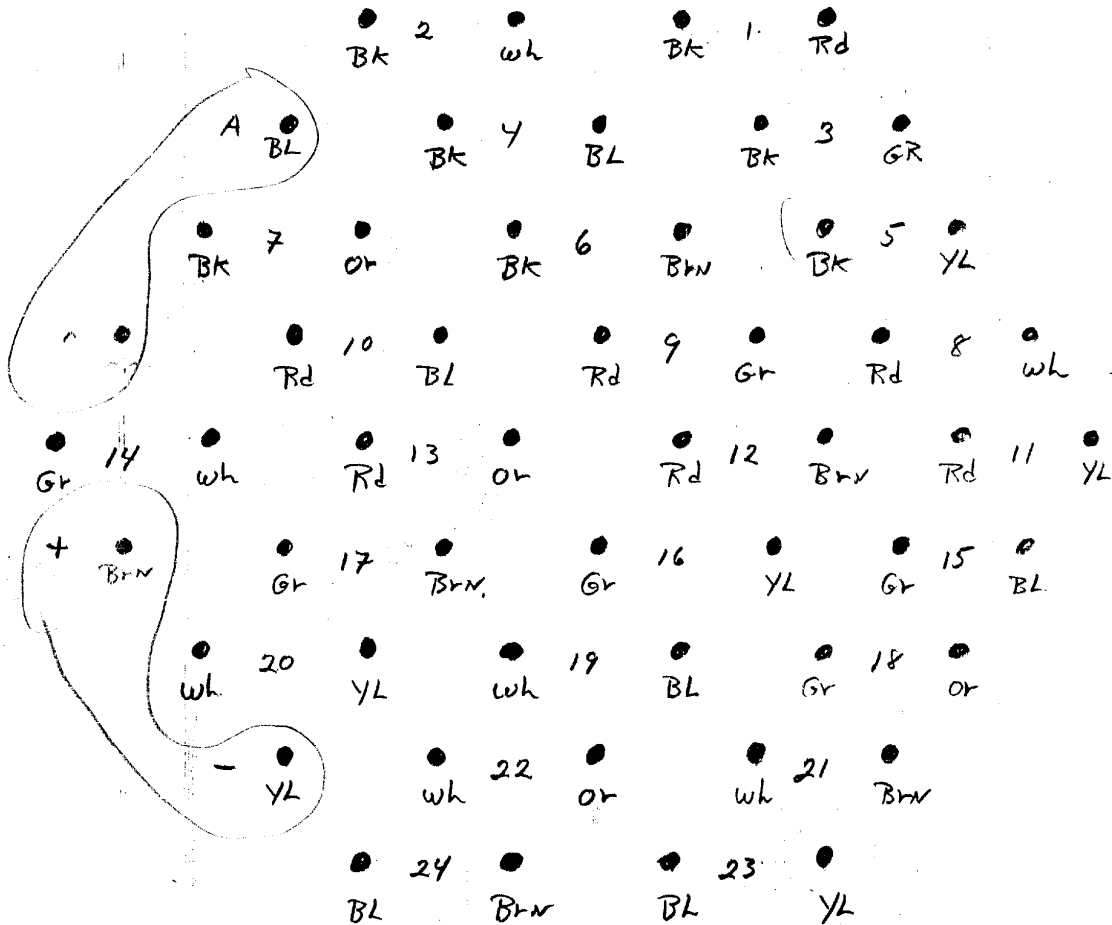


Term Strips Top of Rack

Cable To PTR Plugs. 2

#1

H-

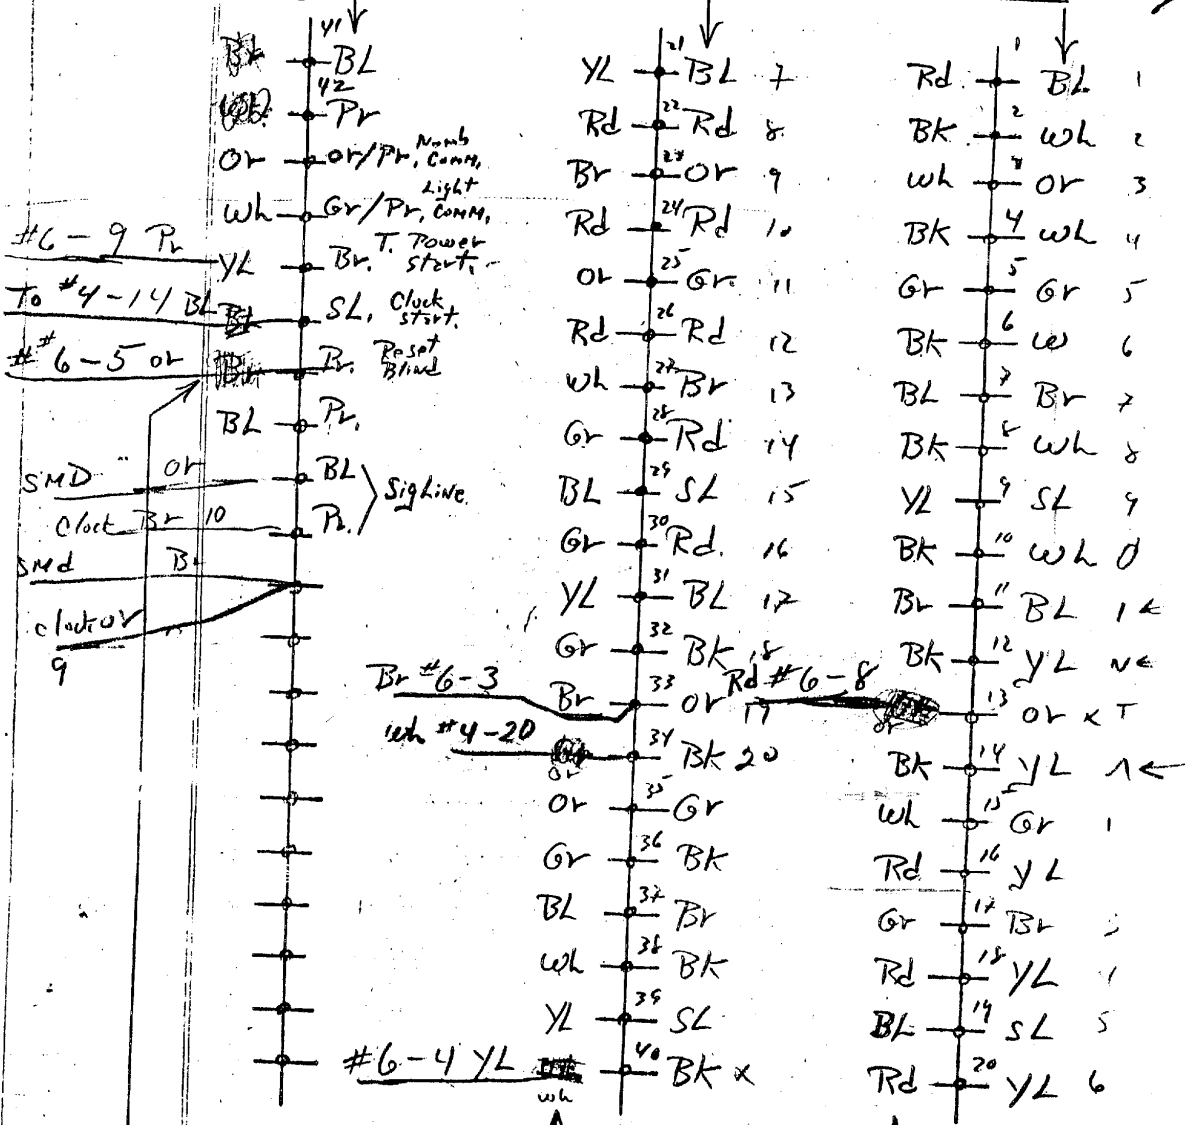

To 54 Pin Connector on Side of Rack.

#3-6

Blind Generated from Pre SW.

Note

Start Box

View of MTD on (B. 10 (2.56))



Female (rear view)

